

# RVPlasticParts.com

**Elevator Gust Lock Measurements** 

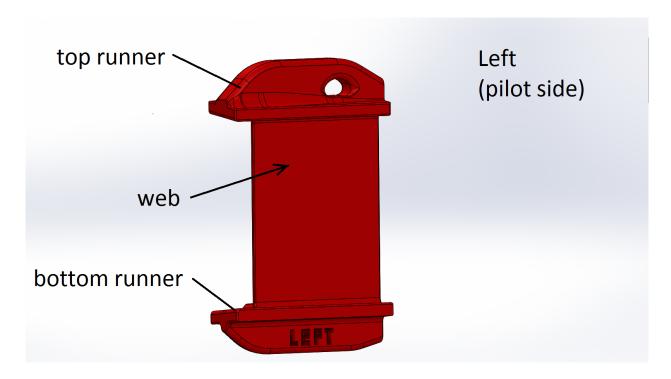

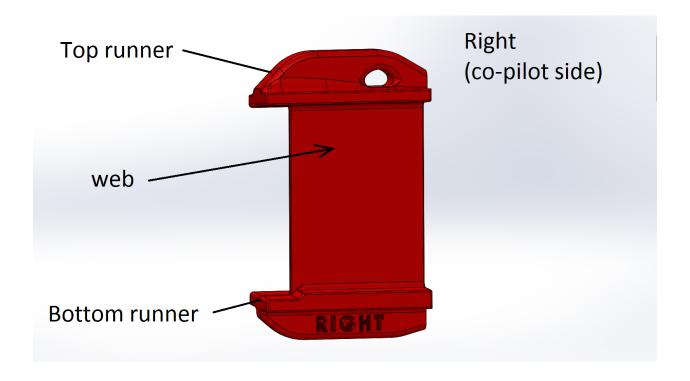


Step 1. Lay tape .250 inch from Elevator horn leading edge. This will be the reference measure line.

Step 2. Measure Elevator Horn Max Vertical Dimension across the Leading Edge. In this example the value = 3.300 inch. Round up to nearest .005, so in this case, the value would be 3.300 inch (no rounding needed). Select 3.300 from the product selection list.



Step 3. Lay tape .250 inch from Fairing trailing edge. This will be the reference measure line.

Step 4. Measure Fairing Max Vertical Dimension across the fairing Trailing Edge. In this example the value = 3.308 inch. Round up to nearest hundredth, so in this case, the value would be rounded to 3.310 inch. Select 3.310 from the product selection list.

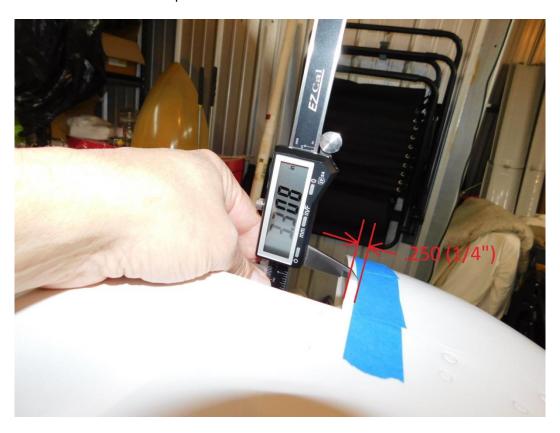

Step 5. Measure the minimum gap with the elevator in the horizontal position. This is the position of the elevator when the gust lock is installed. A feeler gauge or similar may be needed. Record minimum dimension and compare to web thickness selection list. .150 inch gap or greater choose thick web. Less than .150 inch gap, choose thin web. The typical RV-9 and RV-14 curvature of the fairing affects to ease of installation so that is why a .150 gap or less requires the thin web. If the fairing trailing edge straight then a thick web could be used for a gap .125 inches or greater.

Actual printed part web thicknesses:

Thin = .068 inch
Thick = .098 inch





Step 6. Repeat measurements for opposite side. As you will need both left (pilot side) and right (copilot side).

### Measurement table

Left Hand Side	Measurement (inches)	Round up to nearest .005
Fairing Max Vertical Dim		
Elevator Horn Max Vertical Dim		
Gap		

Right Hand Side	Measurement (inches)	Round up to nearest .005
Fairing Max Vertical Dim		
Elevator Horn Max Vertical Dim		
Gap		

#### Rope

Size: ¼ inch diameter

Type: Use a stiff rope such as Dyneema with braided polyester cover or similar. This is the type of rope used on sailboats and is weather resistant and stiff.


\*\*\*\*\*

#### **Installation**

When the rope setup is completed you will only need to make one knot to install the gust locks.

- Step 1. Install Right Hand Side Elevator Gust Lock
- Step 2. Swing Rudder to the Right and Install the Rudder Gust Lock
- Step 3. Install Left Hand Side Elevator Gust Lock
- Step 4. Tighten and Tie knot

Note: You will not damage the rudder by tightening because the rudder is free to move. The tension will be taken by the rope on the opposite side. When the gust locks are installed, the rudder will self-center with the rope and remain secure in both directions.

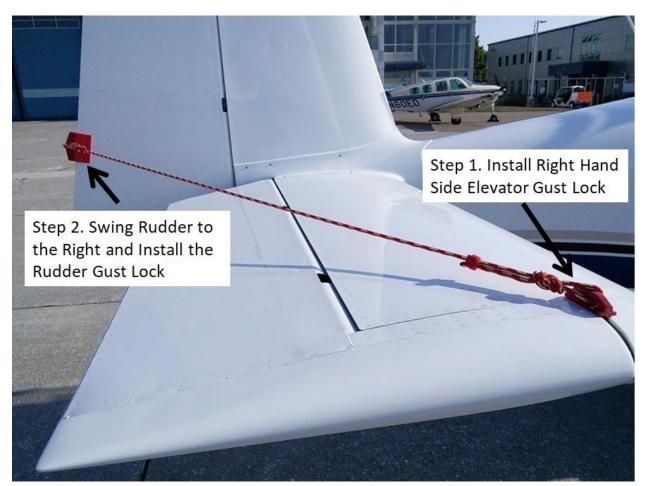



### **Knots**

We use three basic knots. (You may prefer different knots)

- 1. A Figure 8 knot to tie the Right side elevator gust lock and both the left and right side connections at the rudder gust lock.
- 2. A Farmers loop to provide the loop in the line for tightening.
- 3. A halter-hitch to secure the loop tie.

A Figure 8 knot looks like this. This is a good instructional video YouTube link for this knot. <a href="https://youtu.be/GFlwrvggas0">https://youtu.be/GFlwrvggas0</a>

### Rudder Figure 8 knot



Rudder Figure 8 knot. Both sides tied independently. A zip tie keeps it neat.




Right Hand Side Elevator Figure 8 knot



## Farmers Loop and Halter-Hitch Knots



## Farmers Loop

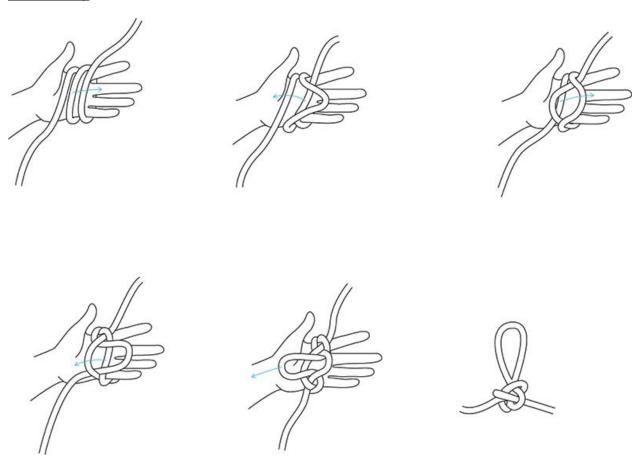

# <u>Halter-Hitch</u>

